

NOV 08 2000

GLU-ALL I/O

00-1188					
INPUTS			OUTPUT		
100	AIRFLOW SWITCH	I1/0	200	TOP SOL	O2/0
101	PLATEN SW	I1/1	201	EDGE ROW 1 SOL	O2/1
102	RESET PB	I1/2	202	SPARE	O2/2
103	POL	I1/3	203	PLATE	O2/3
104	ARC SUPPRESSOR	I1/4	204	RESET /AS	O2/4
105	LEFT PB NO TIE DOWN	I1/5	205	FILAMENT/FHM	O2/5
106	RIGHT PB NO TIE DOWN	I1/6	206	RED LIGHT	O2/6
107	BREATHE SEL	I1/7	207	GREEN LIGHT	O2/7
108	PHOTO EYE JAW	I1/8	208	AMBER LIGHT	O2/8
109	DOOR SWITCH 1	I1/9	209	BLOWER	O2/9
110	DOOR SWITCH 2	I1/10	210	HYD PUMP	O2/10
111	DOOR SWITCH 3	I1/11	211	ALARM	O2/11
112	DOOR SWITCH 4	I1/12	212	HIGH/LOW POWER SOL	O4/0
113	DOOR SWITCH 5	I1/13	213	SPARE	O4/1
114	DOOR SWITCH 6	I1/14	214	CARRIAGE FWD	O4/2
115	MACHINE STOP	I1/15	215	CARRIAGE REV	O4/3
116	E-STOP	I3/0	216	POWER INCREASE	O4/4
117	HIGH/LOW POWER SEL	I3/1	217	POWER DECREASE	O4/5
118	PRESSURE SWITCH	I3/2	218	SPARE	O4/6
119	AUTO START SEL	I3/3	219	SPARE	O4/7
120	CARRIAGE FWD PB	I3/4	220	SPARE	O4/8
121	CARRIAGE REV PB	I3/5	221	SPARE	O4/9
122	CARRIAGE STOP PB	I3/6	222	SPARE	O4/10
123	CARRIAGE FWD LS	I3/7	223	SPARE	O4/11
124	CARRIAGE REV LS	I3/8	224	SPARE	
125	AUTO / MAN PWR SEL	I3/9	225	SPARE	
126	HIGH SET POINT	I3/10	226	SPARE	
127	LOW SET POINT	I3/11	227	SPARE	
128	POWER INCREASE SEL	I3/12	228	SPARE	
129	POWER DECREASE SEL	I3/13	229	SPARE	
130	MACHINE START	I3/14	230	SPARE	
131	SPARE	I3/15	231	SPARE	
132					
133					
134					
135					
136					
137					
138					
139					