
MJ143 Table Saw Manual Book



This manual has been prepared for the owner and operators of MJ143 Table Saw.

Its purpose, aside from machine operation, is to promote safety using accepted operating and maintenance procedures. To obtain maximum life and efficiency from your table saw and to aid in using it safely, please read this manual thoroughly and follow the instructions carefully.

Edited : Aug, 2014.

RECEIVING

Open shipping container and check for shipping damage. Report any damage immediately to your distributor and shipping agent. Do not discard any shipping material until the table saw is installed and running properly. Compare the contents of your container with the following parts list to make sure all parts are intact. Missing parts, if any, should be reported to your distributor. Read the instruction manual thoroughly for assembly, maintenance and safety instructions.

SPHERE OF APPLICATION

MJ143 disc saw machine is designed for vertical or horizontal cutting or at a certain angle.

SPECIFICATIONS

	MJ143
Max. blade dia.....	Φ355mm
Max. working width.....	300mm
Max. working width thickness.....	90mm
Spindle speed.....	3500r/min
Total power.....	3kw
Working table size.....	690x755mm

The above specifications were current at the time this manual was published, but because of our policy of continuous improvement, MAS Company reserves the right to change specifications at any time and without prior notice, without incurring obligations.