



OPERATING MAINTENANCE INSTRUCTIONS

CANJDT75 AUTO DOVETAIL TENONER

6. KEEP CHILDREN AWAY.

All visitors should be kept at a safe distance from work area.

7. MAKE WORKSHOP CHILDPROOF.

With padlocks, master switches, or by removing starter keys.

8. DO NOT FORCE THE MACHINE.

It will do the job better and be safer at the rate for which it was designed.

9. USE THE RIGHT TOOLS.

Do not force attachments to do a job for which they were not designed.

10. WEAR PROPER APPAREL.



WARNING

Read all instructions carefully before operation

COPYRIGHT @ CANTEK AMERICA INC. C/O AKHURST MACHINERY LIMITED

REVISED SEPT. 2020.-J VERSION

2.SPECIFICATIONS

2.1. SPECIFICATIONS

MODEL	CANJDT75
Working length	200 ~ 1500mm (Single board)
Working width	60 ~ 430mm (Single board)
Vertical board thickness	7 ~ 60 mm
Horizontal board thinness	10 ~ 30 mm
Spindle motor	2HP (2P) x 1
Spindle speed	21,500 RPM
Feed motor	2HP(4P) x 1
Working air pressure	3.5 Kg/cm ²
Cutter number	1 PC
Feed rate(3 step speed)	16T, 22T, 31T / min
Cutter shank size	φ12 mm
Packing	140 x 88 x 140 cm
N.W. / G.W.	450 / 550 Kgs

All specifications, dimensions and design characteristics shown in this manual are subject to change without notice by manufacture..