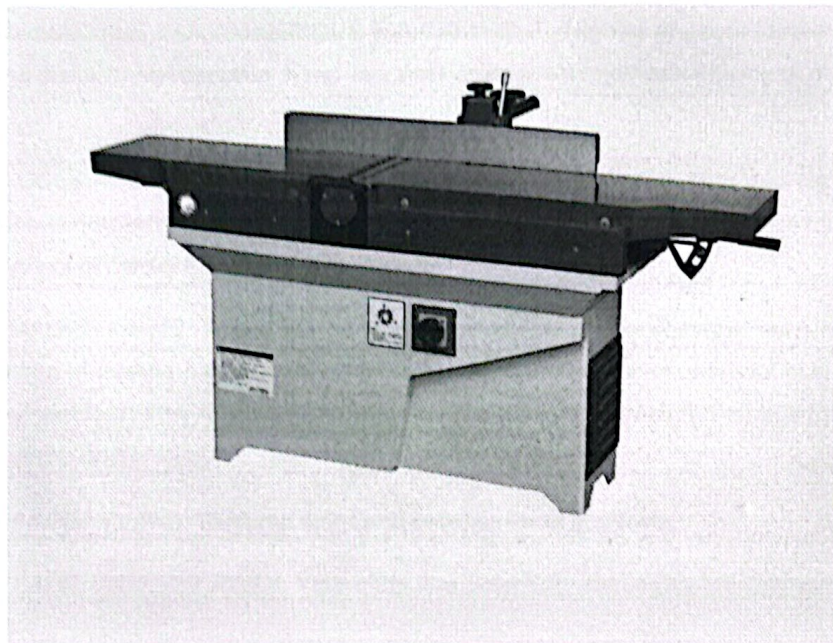

MB503A Jointer Manual Book



This manual has been prepared for the owner and operators of MB503A Jointer.

Its purpose, aside from machine operation, is to promote safety using accepted operating and maintenance procedures. To obtain maximum life and efficiency from your surface planer and to aid in using it safely, please read this manual thoroughly and follow the instructions carefully.

Edited : Aug, 2012.

RECEIVING

Open shipping container and check for shipping damage. Report any damage immediately to your distributor and shipping agent. Do not discard any shipping material until the Surface Planer is installed and running properly.

Compare the contents of your container with the following parts list to make sure all parts are intact. Missing parts, if any, should be reported to your distributor. Read the instruction manual thoroughly for assembly, maintenance and safety instructions.

Contents of crate:

- 1 surface planer body
- 1 fence
- 1 fence carriage assembly
- 1 12-14wrench
- 15 8*15screw
- 3 300mm knives (MBL503) / 400mm knives (MB504)
- 1 Instruction manual

SPECIFICATIONS

	MB503A	MB504A	MB554A
Working table size.....	1790*345mm	1790*440mm	2200*440mm
Fence size.....	880*95mm	880*95mm	880*95mm
Max. working width.....	300mm	400mm	400mm
Max. working depth.....	3mm	3mm	3mm
Spindle speed.....	5600r/min	5600r/min	5600r/min
Total power.....	2.2kw	3kw	3kw

The above specifications were current at the time this manual was published, but because of our policy of continuous improvement, MAS Company reserves the right to change specifications at any time and without prior notice, without incurring obligations.